


22 GENERATOR

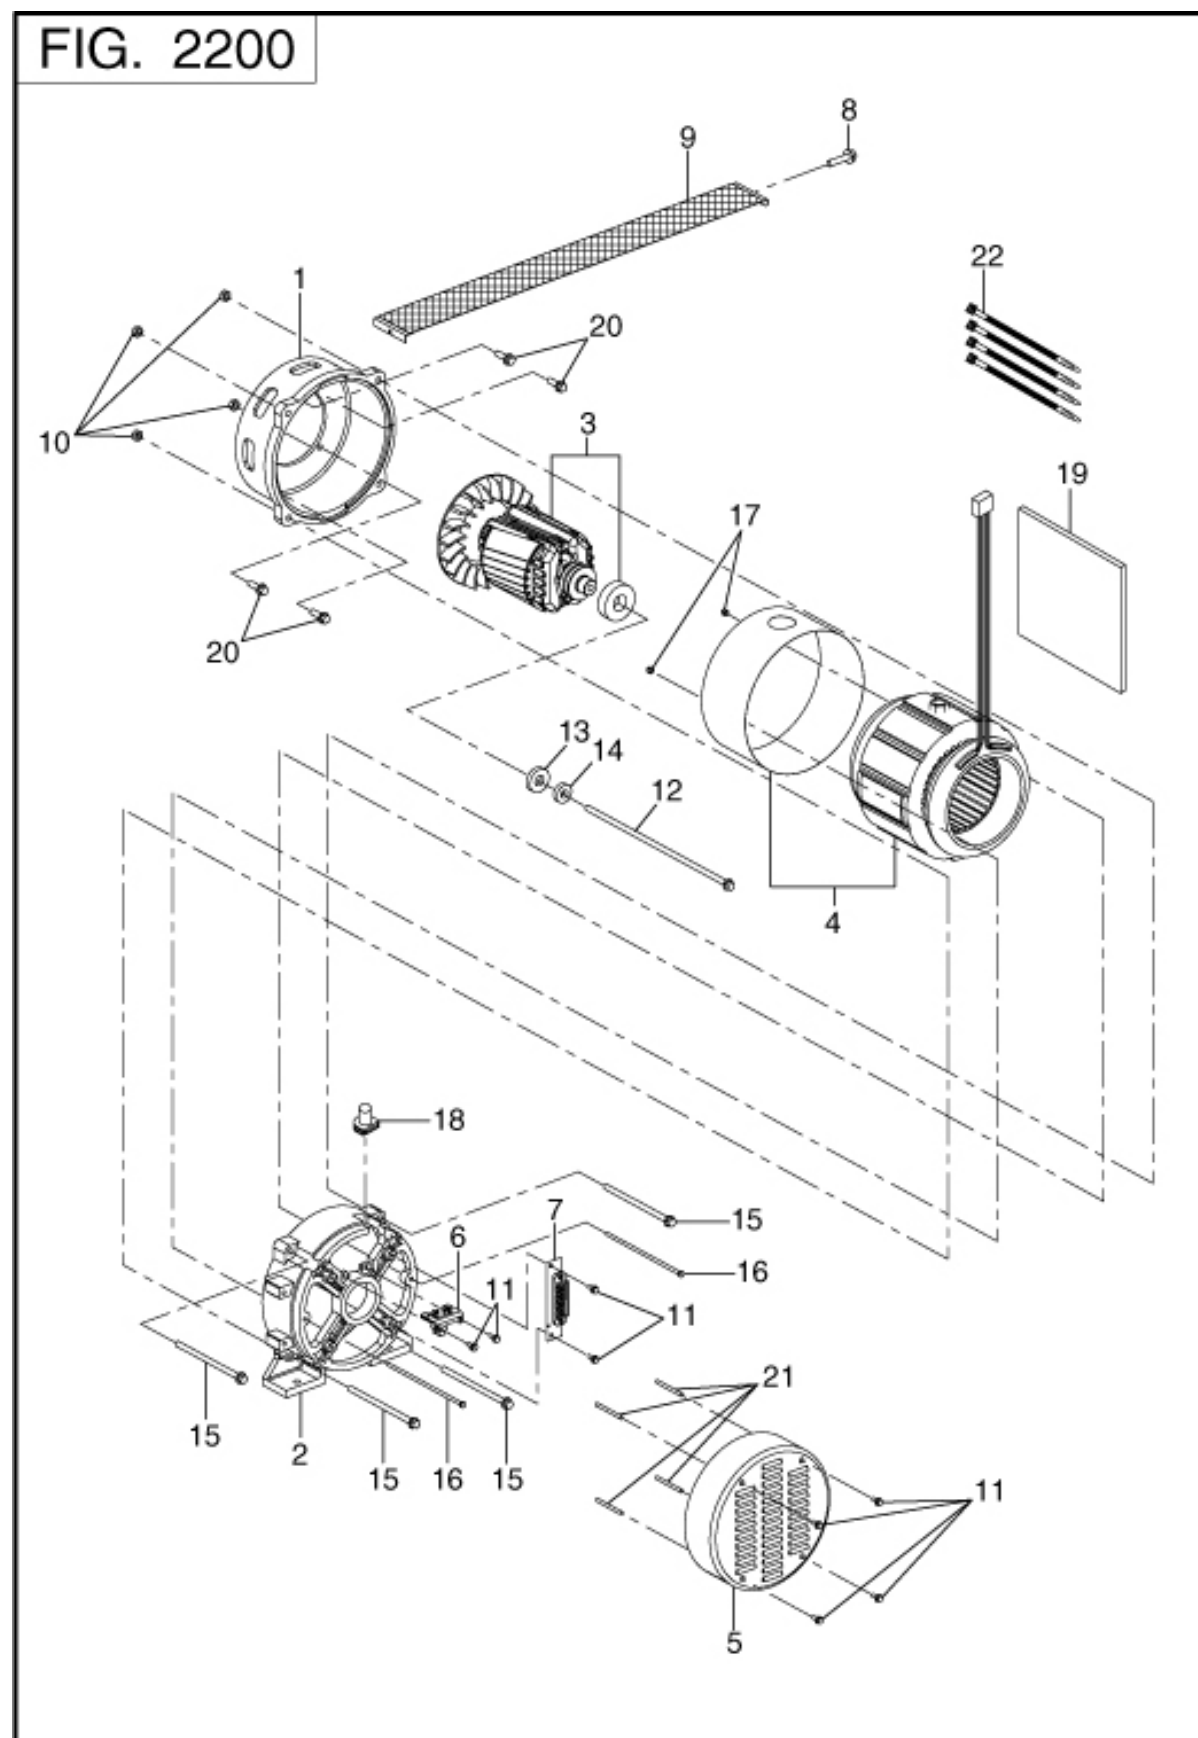

REF.	PART NUMBER	PART NAME	CODE NO.	QTY	REMARKS	INTERCHANGE
1	36F-22001-08	GEN BRACKET 1	-	1		
2	36F-22201-08	GEN BRACKET 2	-	1		
3	36F-20101-08	ROTOR CP	-	1		
4	36F-20001-08	STATOR CP	-	1		
5	36F-23001-08	BRACKET COVER	-	1		
6	36F-20301-08	BRUSH CP	-	1		
7	36F-25001-08	TERMINALBLOCK	-	1		
8	36A-80300-08	BOLT & WASHER AY	-	1		
9	36F-25002-08	COVER	-	1		
10	36A-81007-08	FLANGE NUT	-	4		
11	36A-80011-08	FLANGE BOLT	-	8		
12	36F-21101-08	ROTOR BOLT	-	1		
13	36A-82203-08	WASHER	-	1		
14	36A-82301-08	SPRING WASHER	-	1		480-05010-07
15	36F-21001-08	STATOR BOLT	-	4		
16	36F-25003-08	BOLT	-	2		
17	36A-81201-08	NUT	-	2		
18	36F-25004-08	GROMMET	-	1		
19	36F-25005-08	SPONGE(WIRE)	-	1		
20	36A-80012-08	FLANGE BOLT	-	4		
21	36F-25007-08	SPACER	-	4		
22	36F-25006-08	BAND(NYRON)	-	4		